

'Limitlite' - Axle load indicator operator's instructions

The axle load indicator is an aid for drivers to help them avoid overloading their vehicles.

Green Light = Safe Load

Red light and Audible Warning = Overload

USING THE AXLE LOAD INDICATOR

To ensure the most accurate results Readings can only be taken with the vehicle stationary and on flat level ground having pulled forward and braked gently allowing suspension to settle.

Load the vehicle in a normal manner. When **one red light** and an **audible warning** is heard, the axle indicated is overloaded and the load should be **redistributed** until both lights are **green**. If **both red lights** are illuminated and an audible warning heard, the load has exceeded Gross Vehicle Weight and part of the load must be **removed** until both **red lights go green**.

Pressing the **Mute** button will silence the audible warning; a single 'beep' will be heard. Press again to cancel the mute; two 'beeps' will be heard. Cycling the ignition off and on again while silenced cancels the mute.

QAD 22.11.A2

RF No 9001-106

'Limitlite' - Axle load indicator operator's instructions

The axle load indicator is an aid for drivers to help them avoid overloading their vehicles.

Green Light = Safe Load

Red light and Audible Warning = Overload

USING THE AXLE LOAD INDICATOR

To ensure the most accurate results Readings can only be taken with the vehicle stationary and on flat level ground having pulled forward and braked gently allowing suspension to settle.

Load the vehicle in a normal manner. When **one red light** and an **audible warning** is heard, the axle indicated is overloaded and the load should be **redistributed** until both lights are **green**. If **both red lights** are illuminated and an audible warning heard, the load has exceeded Gross Vehicle Weight and part of the load must be **removed** until both **red lights go green**.

Pressing the **Mute** button will silence the audible warning; a single 'beep' will be heard. Press again to cancel the mute; two 'beeps' will be heard. Cycling the ignition off and on again while silenced cancels the mute.

QAD 22.11.A2

RF No 9001-106